

Splash / Splash-Center + XL-Versions Etching machine

Translation of the original instructions



Content

General.....	2	Setup.....	8
Technical Data.....	3	Operation.....	11
EG-Declaration of Conformity.....	4	Maintenance/Cleaning.....	14
Intended Use.....	5	Spare part list.....	15
Safety Instructions.....	5	Guarantee.....	19
Short instructions.....	6	Disclaimer of Warranty.....	19
Composition.....	7	Copyright.....	19

General

The Splash is a laboratory spray etching machine with integrated rinse. The machine is suitable for single and double-sided copper-clad base material. This equipment is designed with a special focus on ergonomic, clean and low carryover etching and rinsing.

Areas of application:

- acid or aqueous-alkaline etching of circuit boards.
- Developing of positive or negative-working photoresists or laminates (aqueous-alkaline processable - add anti foam if necessary).
- Alkaline resist stripping.
- In the Splash Center all wet process steps of photo positive pcb production can be processed in a single machine, without having to carry the dripping board to the next machine. In the spray chamber the pcb is etched, tank 1 and 2 include a cascade rinsing, tank 3 is used for alkaline developing and in tank 4 the etched circuit board can be tinned.

Features:

- maintenance-free spray etching system with special jet nozzles
- Etch rate of approximately 70 s in 35 micron Cu in fresh, warm FeCl₃
- large window to the etching chamber made of transparent PVC
- maximum board size 210 x 300 mm (Splash XL 300 x 400mm)
- Resolution down to 0.1 mm
- suitable for all common acid etchants
- Opening door for etching zone with safety switch
- removable, etching shadow free titanium plate holders, can be locked in drip off position
- easy access to the interior, no tools needed, therefore easy to clean
- heated by quartz heater 1000 W
- thermostatically controlled etchant temperature
- Etching time is set by digital timer 1 s - 99 min., with count-down, end alarm and auto-reset function
- Overtemperature protection, response temperature 72 ° C
- Stand alone unit with integrated static rinse and drip off frame
- Splash Center with static rinse and a combined static and spray rinse activated by foot switch
- All tanks can be easily emptied by ball valves

Splash Center:

- A spray etching or spray developing chamber and 4 more treatment tanks
- Cascade rinsing with a static and a combined static / spray rinse; foot switch activated
- Tank 4 with magnetic coupled pump for revolving e.g. stripper
- integrated squeeze-off-dryer
- Collecting tray included in delivery

Technical Data

Splash		Splash Center	
LxWxH	60 x 66 x 120 cm XL: 80 x 65 x 120 cm	LxWxH	100 x 67 x 120 cm XL: 114 x 77 x 120 cm
Weight	35 kg / XL: 40 kg	Weight	46 kg / XL: 56 kg
Tank capacity	23 L / XL: 35 L	Tank capacity	23 L / XL: 35 L
Power Supply	230 V 50 Hz 1500 W	Power Supply	230 V 50 Hz 1500 W
Materials	PVC, Titan, PP, Viton	Materials	PVC, Titan, PP, Viton
Maxi. Board size	210 x 300 mm / XL: 300 x 400 mm	Maxi. Board size	210 x 300 mm / XL: 300 x 400 mm
Heater	1000 W Quarz heater	Heater	1000 W Quarz heater
		Water in	3/4" pipe thread
		Water out	spout ID16 / AD20mm

Tanks

			Splash Center		Splash Center XL
Nr	Name	Cont	Mixture	Cont	Mixture
1	Spray Chamber	23 L	23 L of liquid ferric-III-chloride (or if used for developing: 23 L water and 230 g neg. developer). With use of ferric-III-chloride granulees take 13 kg FE3 and 16.5 L water)	35 L	23 L of liquid ferric-III-chloride (or if used for developing: 23 L water and 230 g neg. developer). With use of ferric-III-chloride granulees take 13 kg FE3 and 16.5 L water)
2	Static Rinse	8 L	water (possible 250g RX3)	15 L	water (possible 250g RX3)
3	Combined static/spray rinse	12 L	water	22 l	water
4	Strip tank	8 L	8 L water and 400 g NaOH	15 L	15 L water and 450 g NaOH (when stripping negative material; 30g NaOH per Litre. Stripping of positive material takes 50 g per Litre; adds up to 750 g of NaOH)
5	Reserve tank	8 L	e.g. f. chem. tinning	15 L	e.g. f. chem. tinning

Splash /Splash XL only Spray Chamber + Static Rinse

EG-Declaration of Conformity



EG-Konformitätserklärung/Declaration of Conformity

Hersteller / Supplier:	Bungard Elektronik GmbH & Co. KG Rilkestraße 1 51570 Windeck Germany
Bevollmächtigte Person für die Zusammenstellung der technischen Unterlagen: Person in charge	Jürgen Bungard, Geschäftsführer /general director Rilkestraße 1 51570 Windeck Germany
Produkt:	Spray Etching or Developing Machine Splash, Splash Center and XL-Versions

Hiermit erklären wir, dass die oben beschriebenen Maschinen allen einschlägigen Bestimmungen der Maschinenrichtlinie 2006/42/EG entspricht.

Die oben genannte Maschine erfüllt die Anforderungen der nachfolgend genannten Richtlinien und Normen:

We hereby declare that the machines described above complies with all relevant provisions of the Machinery Directive 2006/42/EC.


The above machine meets the requirements of the following guidelines and standards:

- **Maschinenrichtlinie 2006/42/EG / Machinery Directive 2006/42/EC**
- **EMV-Richtlinie 2014/30/EG / EMC Directive 2014/10830EC**
- **Niederspannungsrichtlinie 2014/35/EG / Low Voltage Directive 2014/35/EC**

- **DIN EN 60204-1** Sicherheit von Maschinen - Elektrische Ausrüstung von Maschinen - Teil 1: Allgemeine Anforderungen / Safety of machinery - Electrical equipment of machines - Part 1: General requirements
- **DIN EN ISO 14121-1** Sicherheit von Maschinen - Risikobeurteilung - Teil 1: Leitsätze / Safety of machinery - Risk assessment - Part 1: Principles
- **DIN EN ISO 12100-1** Sicherheit von Maschinen - Allgemeine Gestaltungsleitsätze, Risikobeurteilung und Risikominderung / Safety of machinery - Basic concepts, risk assessment and risk reduction
- **DIN EN 55014-1 2012-05** Elektromagnetische Verträglichkeit, Anforderungen an Haushaltsgeräte, Elektrowerkzeuge und ähnliche Elektrogeräte, Teil 1: Störaussendung / Electromagnetic compatibility Requirements for household appliances, electric tools and similar electrical appliances Part 1: Emission
- **DIN EN 55014-2-2009-06** Elektromagnetische Verträglichkeit - Anforderungen an Haushaltgeräte, Elektrowerkzeuge und ähnliche Geräte - Teil 2: Störfestigkeit - / Electromagnetic compatibility - Requirements for household appliances, electric tools and similar apparatus - Part 2: Immunity
- **Niederspannungsrichtlinie / Low Voltage Directive 2014/35/EG**
- **Maschinenrichtlinie / Machinery Directive 2006/42/EG/37/EG**

Windeck, 10.1.2022

Jürgen Bungard Geschäftsführer

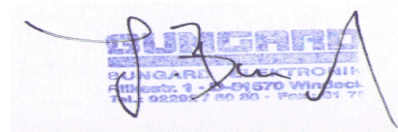

Intended Use

The machines are intended for the chemico-physical treatment of printed circuit boards.

All other application need our written consent or happen on risk of the operator.

The Bungard GmbH & Co. KG accepts no liability for damages incurred in non-authorized use or application of the machine.

Safety Instructions

Read all safety and operating instructions thoroughly before using the unit for the first time. Keep this manual at a safe place in case you need to refer to it again in the future.

The machines are not intended to be integrated or connected with other machines or plants. They may be operated only in appropriate areas and run only by qualified technical personnel. Children and domestic animals are to be kept away!

Electrical connection

The machine is manufactured using certified parts according to the usual guidelines for electrical security. This does not release the user however of his duty to exercise diligence while handling electrically operated devices.

Before all maintenance work on the machine (filling, emptying, cleaning etc.) switch off the machine and pull power supply plugs.

Pay increased attention to electrical defects because of the conductivity of etching solution containing metal salts. In this case pull the plug of the machine and replug only after professional repair. This is also valid for spilled etching agent. As protection against unintentional contact with chemicals, the machines are equipped with a cover protection (door contact switch). This switch is connected to the timer and stops the pump. Note: For job safety examine occasionally the correct functioning of the cover protection. Doing so wear protective clothing and eye protection.

The machine may be switched on only with filled etching agent chamber. The quartz heater must be always sufficiently covered with etching agent! Uncovered glow bar may cause destruction of machine! The correct filling is on height of the sieve.

Never run machine without the sieve over heater, thermostat and and thermal fuse.

Chemicals

*If the etching agent is prepared by release from salts or mixing liquids, this must always take place **outside** of the machine! Pay attention to the safety references of the chemical manufacturer as well.*

Personal protection equipment

While handling etching agents, thus in particular when filling and emptying the machine, wear usual protection equipment, like apron, gloves and eye protection.

Place of operation

Requirement according to WHG and/or supervision of trade: In order to prevent the penetration of etching agent into the ground, the machine must be installed a) in a sufficiently large area with chemical-firm, waterproof ground lining (no tiles, no concrete!) or b) in a chemical resistance, waterproof collecting tray (we offer this as option), which takes up the entire volume of the etching liquid.

We recommend to install an exhaust above the machine for eventual etching steams. This recommendation is however purely precautionary. Leakage of aggressive steams could not be proven in two independent investigations. (It escapes water vapour, the salts of the etching agent remains in the solution). An exhaust connected firmly to the machine is not possible - risk of damage by negative pressure.

Environmental protection

Used up etching agent is special refuse. It must be handed over to certified disposal enterprises under indication of the waste key number. Pay attention to the refuse laws and regulations of your country. We are not authorized to redemption.

Prior to operating the machine, be informed on all applying environmental protection legislation of your country. Used etching liquid contains copper and must be treated as special waste. In most countries, this applies also for the rinse water. We recommend that you collect dirty rinse water and use it to set up fresh etching liquid or to compensate evaporations losses. In accordance to anti pollution laws, the final cleaning of the boards normally requires a cascade rinsing unit, or further wet process steps, like chem. tinning or resist stripping. Any attempt to neutralize the etchant or the rinse water is NOT recommendable to other than approved chemists.

If you do not have an appropriate water purification for the rinse water in your facility, we recommend our waste water processing facility **lonex** for this task.

Short instructions

Upon reception examine the machine for any apparent damage, and if so inform your shipping agent and us immediately.

Please read the manual carefully and follow the safety instructions.

Transport the machine to its place by lifting it up at two legs on each side.

The floor must be level. Underlay the legs if necessary.

Make sure the drain valves are closed.


Splash Center: Connect the combined spray/static rinse inlet to your water supply and the drain to the sewer system. The inlet has a 3/4 inch screw and the outlet a 20 mm drain spout. Choose the appropriate hoses and clamps. Please understand that we cannot supply these hoses due to different connection standards worldwide.

Mount the sieve into the spray chamber, if necessary.

For a first test of the machine fill the spray chamber up to the sieve with water. Fill the rinse and treatment tank, each with about 8 liters of water.

Connect the machine to the mains (we assume that your electric system is protected by RCD according to your local regulations).

Turn the main switch and the switch for the heater. In operation, the switch lights and the heating element changes to an orange-red color.

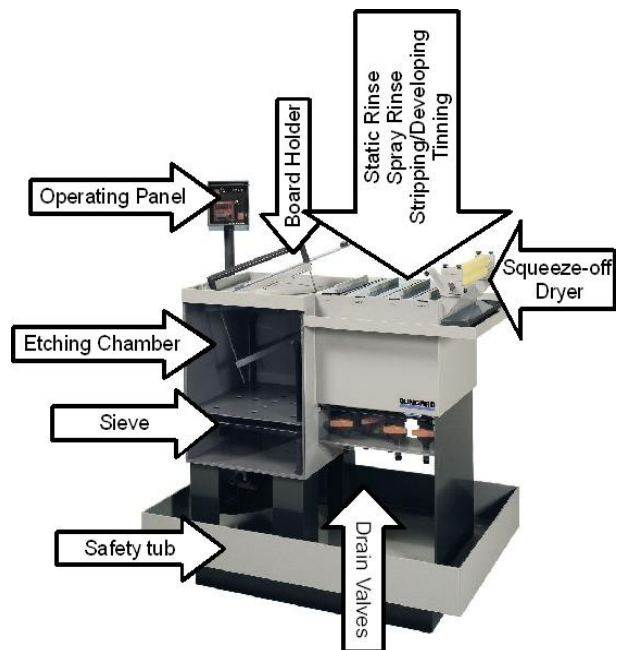


Set the plate holder vertical, select etching time on the timer to approx. 10 seconds and remove the air from the pump. Turn the pump on for about 10 seconds and turn off again. Repeat this process if necessary at intervals of 30 seconds, two or three times. The pump must not run dry for long periods.

Check operation of door safety switch by lifting the plate holder. The pump must turn off, when the lid is lifted for approx. 5mm.

Turn off the machine, let it cool down and then remove the water. Now fill in the etchant (13 kg ferric chloride and 16.5 L

of water give 23 L caustics) or the developer (23 l water and 230 g neg developer). Please prepare all chemicals outside of machine!

We generally recommend the use of ferric chloride as etchant. The etching of 35µm copper takes about 1 minute (etch rate of 0.5 micron/s) with fresh and warm ferric chloride. The etching times are prolonged with increasing copper saturation. At an etching time > 4 minutes, we recommend to change the etchant.

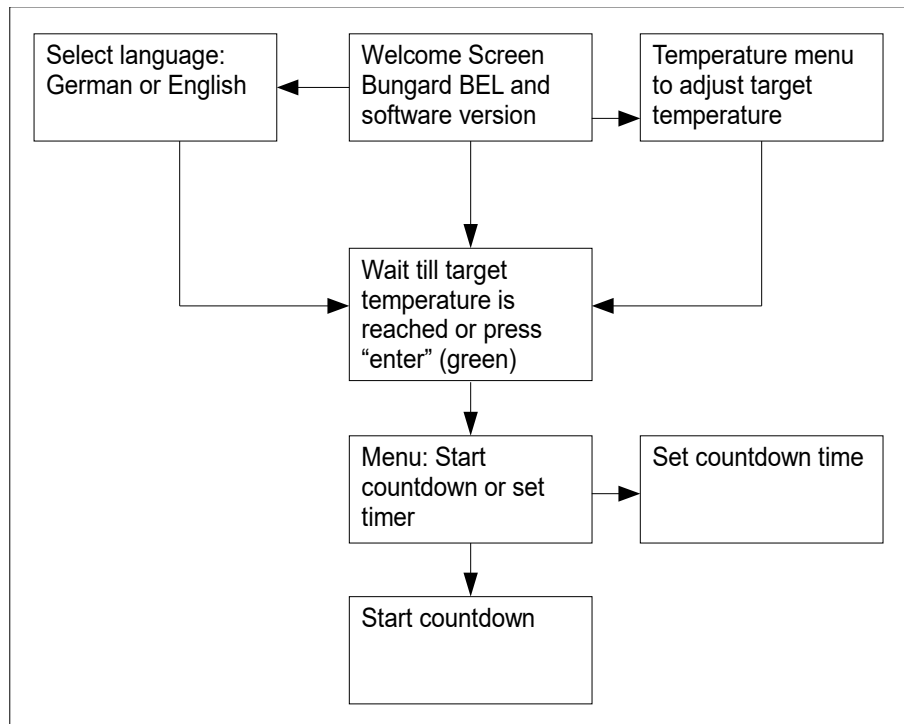

Composition

The machine body consists of light-grey PVC and transparent PVC at the front. The interior of the machine is divided into the spray zone and the medium container. They are divided by a removable and punched sieve.

The two full jet nozzles are arranged diagonally in the spray zone. Their spraying angle and their arrangement ensure that the foremost and back of the entire effective area are shade-free covered.

The cover of the machine is removable and carries the diagonally arranged pcb holder. On the upper left the tiltable control console is attached. On the back of the machine is a maintenance-free, magnet coupled centrifugal pump.

Splash:

At the right side of the machine is the rinsing zone.

Splash-Center:


Beside the spray chamber there are 4 vertical treatment basins with each having approx. 10 l (16l XL) content. The first tank from left is the first (static) rinsing zone. Then follows the combined static/spray rinse with two horizontally attached nozzle tubes, which are activated by single magnetic valve and foot switch. This rinse has a floor drain and an adjustable overflow.

The third basin serves for developing positive coated plates or for stripping negative laminate. The liquid herein is rolled over by a small centrifugal pump when the machine is switched on. Note! This pump may not run dry! Therefore this bath must be always filled at least with water. In this basin is a lifting device which enables to take out pcbs out of the tank without having contact to the caustic solution. A sifter prevents parts from getting into the pump.

The drain valves for the etching agent and the rinse water are well accessible below the respective containers.

In the rinsing zones are short pipes in the floor drains. These are to hold back possible sludge sediments when emptying. If you want to completely empty the tanks, just pull up the pipes with a plier.

Splash-Center: The machine is supplied with a safety catch pan. This tub is so dimensioned that it can take up the entire liquid in the accident.

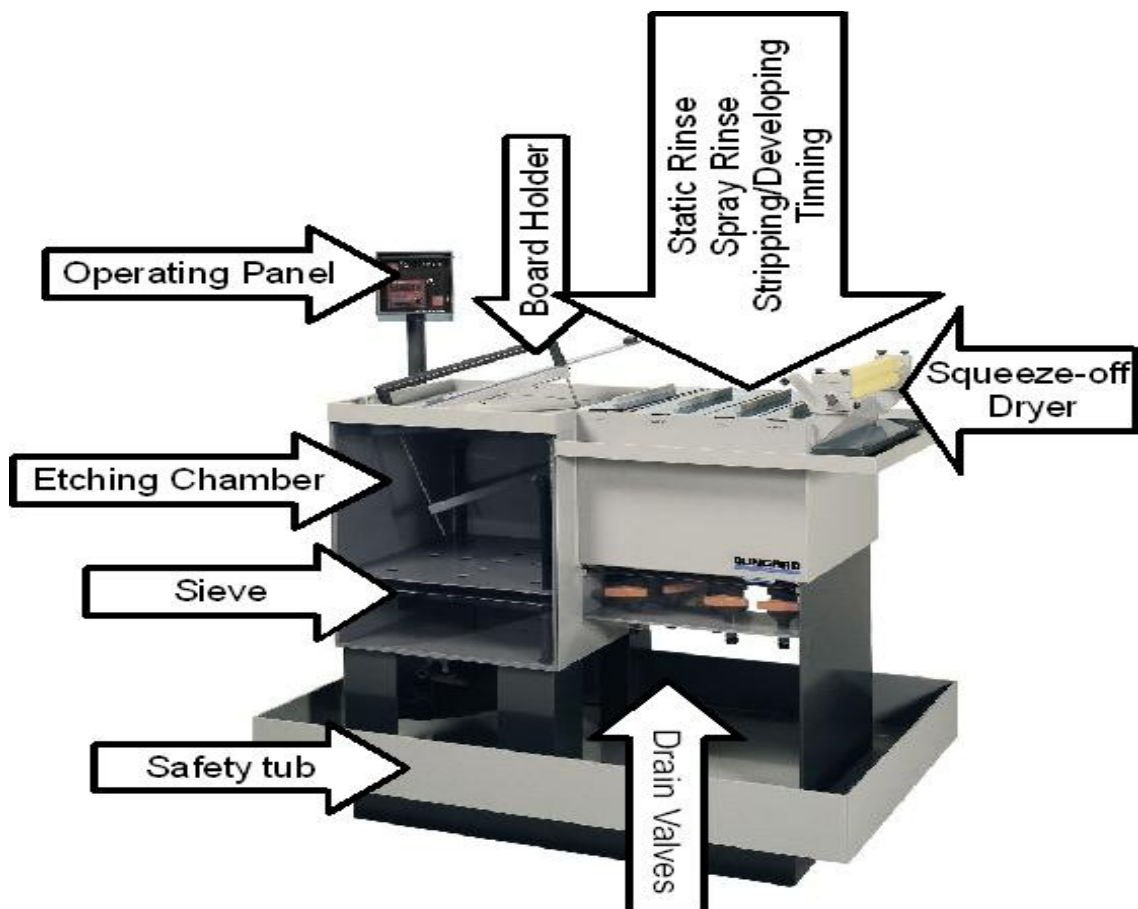

Setup

Take over from the transport agent

After receiving and unpacking, check the machine for possible transport damages. In case of transport damage, please inform your insurance, the transport company and the manufacturer / supplier.

Transport to the place of installation

Only use suitable lifting and transport equipment such as forklifts or pallet lifts. Secure the machine against sliding / tilting.

Place of installation

The machine must be standing level and around the machine there has to be sufficient space for operation and maintenance work (approx 1m on all sides). To prevent the penetration of chemicals into the ground, set up the machine either in a room with solid, waterproof and chemical resistant floor (no tiles or concrete!) or in a chemical resistant waterproof collection tray which can take the whole filling volume.

Connections

Connect the overflow of freshwater rinse (Spout D20) with your rinse water treatment. Make a connection to the fresh water inlet (thread 3/4"). Finally connect the machine to the mains (220V / 50Hz). We presuppose an on site fuse protection of the electric circuit.

Test run

To check for leaks and function, first run the machine with **water** only. Open the lid to the etching chamber and fill in water from above. The sieve of the etching chamber must be covered with liquid.

After the first filling, the pump must be aired out. Run it for approximately 10 seconds. Repeat this procedure if necessary after 30 seconds two or three times. The pump may not dry run for longer time.

Fill the static rinse of the Splash so far with water that a plate, which is immersed with the plate holder, dives in completely.

Fill the two rinsing chambers of the Splash-Center with water until the upper board holder is covered with water


The tank next to the two rinsing tanks has a centrifugal pump and can be used for developer (photopositive process) or stripper (negative process). The tank on the right you may use for tinning. If you do not want to use a developer nor tin, please fill the tanks in any case with water. The pump in the developer basin may not dry run, empty tanks can deform.

Note: The level and temperature must always be monitored by the operator.

Adding the Etching Liquid

The machine can be operated with all usual etching agents. We recommend to use as etching agents ferric-III-chloride (FeCl3). Using ferric-III-chloride you will obtain a substantially higher etching achievement and precision than e.g. with sodium persulfate. It can be also used much longer than most other etching liquids and so meets the requirement to reduce special refuse. You can purchase ferric-III-chloride from us.

Be cautious with all regeneration-needing etching agents. They can overheat by chemical reaction. Prepare fresh etching agent outside of the machine. Fill in only completely dissolved etching agent! If incompletely dissolved etching agent comes into the pump, it can block and damage the pump.

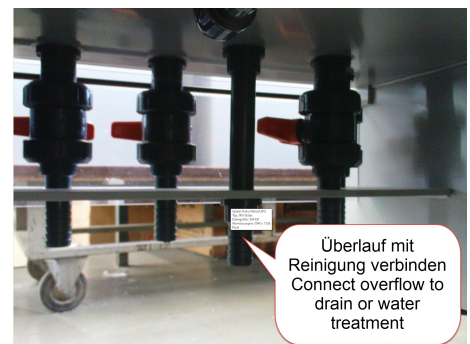

The etching agent is filled from above into the machine. In order to remove the cover, first carefully raise the surrounding rim on all sides evenly and remove it. The cover including the pcb holder can now be lifted.

The filling amounts to approx. 24 l (36 l XL), the correct level is reached when the sieve is covered.

Etchants

Ferric-III-chloride is very easy to handle, has very good etching quality and broad band of application. That is why it is the most popular etching agent for laboratory uses. Ferric-III-chloride has a high etching speed and ensures perpendicular copper walls after etching. We strongly recommend to use ferric-III-chloride with our machines.

Mix 800 g Granulate per litre water. This will be 1.4 l of ready solution. Ferric-III-chloride etches warm and cold. The optimum temperature is approx. 45°C.

With our etching machine JET 34 a fresh solution of ferric-III-chloride etches 35 µm Cu in approx. 70 seconds. With increasing saturation etching time goes up to 3 Min for 35 µm Cu. Under-etching increases only slightly.

Ferric-III-chloride can take up to 50 g Cu per Litre. In reality you will not reach that limit, because etching time will take too long. Recognize the saturated solution from its milky look.

Experienced users add small portions of 15% Hydrochloride acid (HCl) to the used solution to prevent copper mud and Ferric stain in the machine. We will supply further information on request.

The used etching agent has to be disposed according to your national legislation.

We do **not** recommend to neutralize the used etchant, because you have to precisely analyse the copper concentration after neutralisation. In Germany copper concentration in waste water has to be less than 0.5 mg Cu/l.

Your Disposal administration will advice you on how to dispose the used etchant. Additional information you will find in the material safety data sheet (MSDS).

By the way: the brown spots on clothing and items caused by Ferric-III Chloride are easily removed by our stain remover RX3.

Other Etchants:

Etchants	Pros	Cons
Ferric-III-Chloride	Cheap, high copper capacity (50g/l) good etching rate (0,5µm/s), stable, good sharpness, low underetching, not considered as a dangerous good, stains easily removable with RX3	sludge formation Regeneration only difficult
ammonium persulfate	„clean“, good etching rate (8-30µm/min) and copper capacity (30-40 g/l)	Forms complex salts (including double salts of copper sulphate and ammonium sulphate), disposal 10 times as expensive as Fe3Cl, corrosive fumes, Crystalline deposits at temperatures below 30 ° C, which are sharp as glass and can damage pumps and cut moveable machine parts,
Sodium persulfate	no sludge, suitable for metal, copper can be deposited electrolytically	Low etch rate (0.1-0.2 micron/s), does not etch in cold state, decomposes when heated (especially in the vicinity of the heating rod), catalyst (mercury) is toxic.
copper chloride	Regenerable, good capacity (100g / l) and etching rate (30µm/min)	Bath control is very complicated, fumes are toxic/aggressive
ammonia	suitable for metal resist, good copper capacity (up to 200g / l)	bath control difficult, exothermic reactions, toxic fumes, complex salts, crystallization risk

Operation

The control panel is protected by an upward tiltable, transparent cover against contamination. The grasp to open the cover serves at the same time as actuator for the start-stop tracer of the timer.

Main Switch

The button on the upper left of the control panel switches the electric circuit for the pump and the heating.

Heating


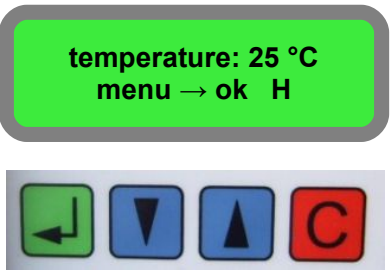
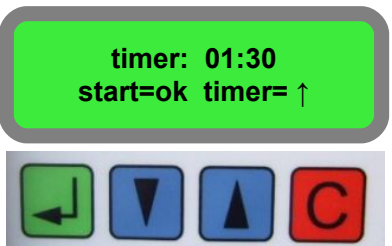
The switch down right on the control panel controls the heating. A thermostat regulates the temperature on 2 degrees exactly. As additional security against overheating the machine is equipped with a not resetable temperature protection in the heater circuit.



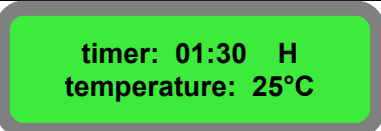

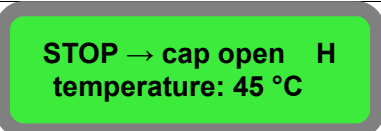

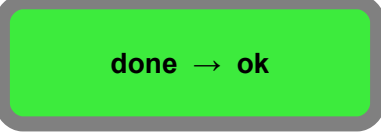

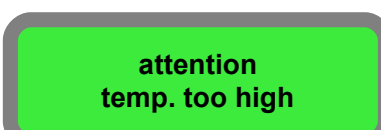

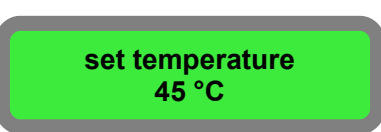



Control panel with new timer

Timer features:

- a) Adjustable timer up to max. 99 minutes 59 seconds
- b) continuously adjustable temperature control from 30-45°C with a visual display of current temperature and the activity of the heating (displayed "H")
- c) audible and visual alarms for over temperature (T > = 55°C)
- d) Door Switch monitoring with visual display and waiting call
- e) Select of language English or German (other languages are possible)
- f) automatically stores the last set parameters: language, set temperature, time.

<p>After switching on the mains the welcome screen "Bungard BEL" appears on the LCD and the software version</p>	
<p>Then the temperature control starts, and on the LCD appears the "current" temperature as well as a H for heating (if the machine has not yet reached the target temperature) and menu "ok". When the set temperature is reached, the timer automatically switches to the main menu. If the user does not want to wait for reaching the target temperature, he gets directly to the main menu by pressing the Enter key (green).</p>	
<p>In the main menu the LCD shows: Time: xx: xx (adjusted value) start = ok; Timer = arrow. Pressing the Enter key the machine starts. Pressing the arrow key you can enter a new time value.</p>	
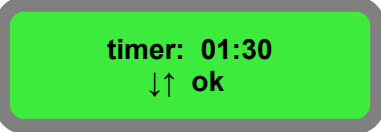
<p>If you want to change the time, then press the arrow key. The display shows Time: 00:00 arrow up/down ok. The cursor jumps to the first 00:00. Now use the arrow keys to adjust the desired value.</p> <p>Pressing the Enter key you confirm the value and the cursor moves to the next digit (10:00). Now enter the remaining digits in the same way. Pressing "enter" you confirm the setting and you jump back to the main menu.</p>	 
<p>If you press Enter in the main menu, the timer starts and the pump switches on. On the LCD the remaining time, the current temperature and the activity of the heating (H) are shown.</p>	 
<p>If you open the lid, the timer and the pump stop. The display shows „stop → cap open</p> <p>If you close the lid again, the job continuous.</p>	 
<p>When the job is finished, you will hear a beep and on the LCD appears "done → ok". Pressing the Enter key, you return to the main menu.</p>	 
<p>When the temperature of the etchant reaches 55°C (eg by exothermic reaction), an audible alarm sounds and the display shows the message "Attention temperature too high".</p> <p>If the temperature is getting too high during the etching process, the pump will continue to support the cooling.</p> <p>Now, the operator must take measures to lower the temperature.</p> <p>As long as the temperature is > 55°C, the alarm remains, and only by turning off mains the machine can be stopped.</p> <p>If the temperature falls below the threshold temperature, the alarm can be cancelled by pressing the Enter key. In stand-by mode (machine is turned on, but no etching process is taking place) the temperature is still monitored and an audible and visual alarm is displayed when reaching the threshold temperature of 55°C. The pump will start if lid is closed and will stop when lid is opened. If the temperature falls below the threshold temperature and the alarm is cancelled the pump turns off again.</p>	 
<p>Setting the target temperature: To set the target temperature, press both arrow keys, during the welcome screen, until the temperature menu appears. Then set the desired temperature with the arrow keys and press Enter.</p>	 

Setting the language is similar. Press both "C" and the "Enter" key during the welcome screen until the language menu opens. Then use the arrow keys to select the desired language and confirm with Enter.


Additional protection function: if temperature sensor is not connected or the wire is interrupted, then an audible alarm can be heard and a message: **Warning: temperature is too high** is displayed on the screen.



Feeding the etching chamber


The machine can take at a time either 1 board of 210 x 300 mm or e.g. 3 boards of 100 x 160 mm. The left side of the board holder is fixed to the machine's cover. This pivot allows to either put the board holder in its horizontal operation position or to put it vertically for feeding/discharging boards. We have chosen this principle to allow that the liquid can easily drop off from the boards (saving rinse water) and that the dropped of liquid immediately returns into the machine.

The board holder has two bars mounted on titanium pins. They can be adjusted in height and thus allow adaptation to different board sizes.

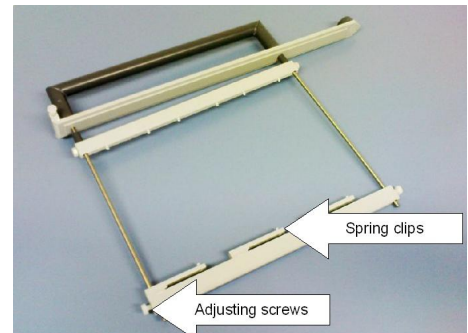

One of the bars carries three clamps. These allow to mount the boards to the holder without necessity to slide the entire bars for and back. To feed a board, proceed as follows: Keep the board with your right hand, insert it into the clamp(s), keep it there with your left hand and make it snap into the right bar's PVC teeth. To dismount, proceed in reverse order.

On the surrounding frame the Splash-Center has two small pieces of dark grey PVC in front of the tanks. These provide a stand for the board holder, so you have both hands free for placing the PCBs in the holder.

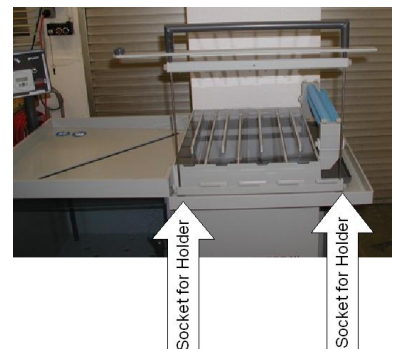

Rinsing - Splash

After retracting the boards from the holder, immerse them into the rinsing tank and move them slightly for and back. On the upper right of the rinsing tank, there is a slotted bar. Put the rinsed boards there to allow them to drip off. We recommend that you wear thin latex gloves when handling the boards. There is space to put the gloves on the frontal or the right side of the rinsing tank's surrounding.

Rinsing - Splash-Center

The machine provides multiple rinse technique. The first tank is a static rinse that accepts most of the metal salts sitting on the board after etching. The next tank is a combined static and spray rinse. Here you immerse the board into the rinse water, then you press the foot switch and while pulling the PCB upwards, the spray rinse gives it a final cleaning. What you get is a triple rinse in two tanks. This allows to reach the minimum requirements for environmentally safe rinse techniques: Each rinse step dilutes the remaining copper concentration by a factor of 10, so the water going through the overflow is purified by a factor of 1000.

Maintenance/Cleaning

Changing of the etching agent

The etching agent is discharged over a ball valve, which is under the machine body. As described above, you have access to the etching chamber when you remove the cover. This makes it easy to remove any sediments manually. If you use ferric-III-chloride and consider the following proposal, you can change the etching agent without large cleaning expenditure: With increasing saturation ferric-III-chloride tends to deposit surplus cuprous salts as mud. The solution changes its colour from a initially transparent to a milky green-brown. At this time usually the etching time doubles in comparison to the beginning. If you change the etching agent at this time, then the mud formation can be stopped and mud already set off will be brought back into solution.

Dismantling

For cleaning and repair works, it may be necessary to dismantle the inner parts of the spray chamber. To do this, follow these steps:

1. Remove the lid frame




4. Dismount the sieve




2. Remove the board holder from its hinge




5. Discharge the etching or developing liquid

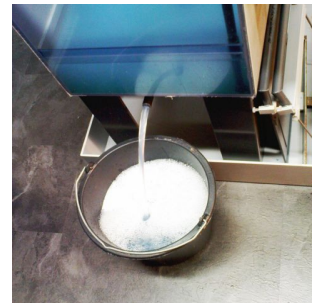

3. Lift the lid of the spray chamber

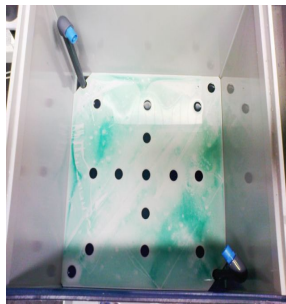

6. Now you have access to e.g. the etching nozzles adjustment

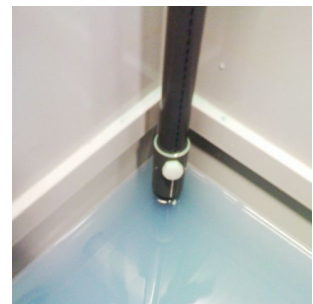

Cleaning of the machine in use of FeCl3:

Equipment: Apron, eye protector, (Latex) gloves, 2 plastic scrapers, 2 plastic sponges, 2 buckets, paper cleaning cloths, plastic foil, container from plastic for used etching agent

Chemicals: Hydrochloric acid HCl technically, concentration approx. 15%, quantity approx.: 24 l, stain remover RX3

Proceed: Cut the plastic foil in the double size of the utility space of the machine. Put on protective clothing. Discharge etching agents from the machine into suitable container. Take up existing sludges with scraper mechanically and give it to the etching agent. Lift the machine and set it on the foil. If you do not have an exhaust move the machine to proper ventilated room or outside.

Fill the machine with 15%iger HCl. Close the cover. Run the machine with heating switched on for several hours. Repeat if necessary the cleaning run the next day.

To Clean from the outside give warm water into a bucket. Add stain remover on a wet sponge and use it like abrasive powder. Let the paste act on the surface, if necessary moisten again with sponge. Repeat this procedure, until the marks are faded. Particularly persistent deposits carefully dab with HCl. To clear rinses thoroughly wipe of machine with a not dripping sponge and clean this sponge in a second bucket.

Discharge HCl from the machine and store to re-use it again. Close drain valve. If the machine is not filled again, Wipe off the inside of the machine beginning from the top and working your way down. Clean sponge in second buck. Do not touch the uncleaned parts of the machines, wear long sleeved gloves if necessary. Give the contents of the second bucket to the used up etching agent. Alternatively clean the machine from the inside by test run with water.

Return the machine to its location. Examine whether the glow bare is intact (do not switch on, only visual check.) If necessary remove the electric case and pull back the rubber seal of the glow bare to check for any penetrated liquid. In this case you have to exchange the glow bare. Fill the machine with water and perform for a test run and then exchange the water with fresh FeCl3.


The hydrochloric acid can be used later, in order to dissolve sludge sediments in etching agent. Give HCl in portions of approx. 0.5l to the dirtily brown etching agent and let the machine run briefly. Do this so long, until the solution is to a large extent clear again. But: NEVER give Hydrochloric acid to fresh ferric iii-chloride ! Dispose possible surplus of HCl with used etching agent.


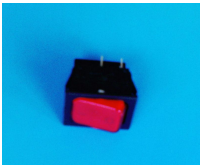






This guidance represents only the fundamental procedure in standard situations. Mistake and change reserved. Handling the chemicals takes at one`s own risk. Regard safety regulations!

Against FeCl3 marks on clothes, smooth and porous surfaces we supply a highly effective stain remover on organic basis.

Drain the dirty rinse water from floor drain of the rinsing zone. The waste laws demand economical handling of rinse water. We advise to collect the water from the first rinse a) to compensate evaporation losses of the etching liquid and b) for new FeCl3 solution! After discharging the water sediment remains in the basins. Take up mechanically and give these it to the used up etching agent. Dispose surplus rinse water together with the used up etching agent.

Spare part list

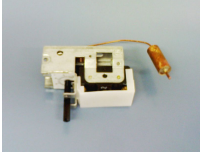Artikelnr.	Langtext Deutsch	Langtext Englisch	Bild
699300	Kugelhahn DN15 f. Ätzmaschine	cog valve DN15 f. etching machines	
699301	Kugelhahn DN25 f. Ätzmaschine	cog valve DN25 f. etching machines	

699303	Heizung komplett f. Ätzmaschine	Complete heater for etching machine	
699304	Schalter beleuchtet f. Ätzmaschine	Switch illuminated	
699305	Quarzrohr f. Heizung Ätzmaschine	quartz tube for heater element	
699306	Heizelement 1000W f. Ätzmaschine	Heater element 1000W f. etching machine	
699615	Thermostat f. Ätzmaschine	Thermostat f. Etching machine	
699617	Temperatursicherung f. Ätzmaschine	Thermal fuse for etching m/cs JET/SPLASH	
699616	Timer mit integriertem Thermostat f. Ätzmaschine Jet/Splash ab 2011/2012	Timer with built-in thermostat f. Jet/Splash etching machines later 2011/2012	
6000	Sensor für Temperatur und Zeitsteuerung	Sensor for temperature and time controller	
6000	Frontplatte Jet, Splash, DL	Front panel Jet, Splash, DL	

6000	Plexiglasplatte für Jet und Splash	plexi cover for the control panel	
690651	Vollkegeldüse f. Splash mit Stock	spray nozzle f. Splash with arm	
6000	Vollkegeldüse f. Splash	spray nozzle f. Splash	
690652	Ätzmittelpumpe f. SPLASH	Ätzmittelpumpe f. SPLASH	
690653	Plattenhalter f. SPLASH	Board holder f. Splash	
6000	Plattenhalter Splash Oberteil mit Federbügeln ; Unterteil ohne Federbügeln inkl. Schrauben	Upper/Lowerpart of board holder Splash/Splash-Center. Upper part with spring clamps, lower part without spring clamps	
690655	Impeller f. Ätzmittelpumpe SPLASH	impeller for SPLASH etchant pump	
690656	Auffangwanne für SPLASH, Format ca.	anti pollution tray for SPLASH, size:	
690656	Auffangwanne für SPLASH/Jet, Format ca. 670mmx670mmx125mm (außen) ca. 8 kg, ca. 56 L	anti pollution tray for SPLASH/Jet, size: 670mmx670mmx125mm, about 8 kg, approx. 56 L	

690658	Deckel für SPLASH	top cover for SPLASH	
690659	Abschlussrahmen für Splash	Sealing Frame for Top Cover /Splash	
690670	Keramik Impellerachse für Pumpe SPLASH	ceramic impelleraxis f. SPLASH pump	
6000	Deckelschalter	Lid safety switch	
6000	Satz Trockentücher	Set of drying cloths	
6000	Tropftablett	Dripping tablet (Center)	
6000	Platinenretter	pcb-rescuer	
6000	Siebboden	Floor sieve	
6000	Abeckplatte Kugelhähne	Cover ball valves	
6000	Deckel Tank 1	Lid tank 1	
6000	Deckel Tank 3+4	Lid tank 3+	
6000	Abquetschtrockner	Squeeze off dryer	

Guarantee

All machines are submitted before distribution to examination on function and continuous operation firmness. On the machine we grant a work warranty of 12 months to our customers starting from purchase date on accuracy in material and processing. We warrant at our choice by exchange of incorrect parts or by repair of the machine in our house. Old parts change into our possession.

Disclaimer of Warranty

Bungard GmbH & Co.KG reserves the right to change or enhance its machines or machine specifications according to its judgement, if necessary. Bungard cannot be held responsible to implement aforesaid changes into machines sold already.

Bungard products and services are liable to the current prices and conditions, which are subject to change.

The instructions and definitions in this document are also subject to change and mark no assurance on the part of Bungard.

This manual contains informations of the Bungard Compacta and is the translated English version.

Please regard the "Sales terms and delivery conditions". These are available after fulfilment of the contract. We don't furnish a guarantee or warranty in cause of damages at material or hurts of people because of

Incorrect use of the machine

Wrong setup, installing and operating of the machine or incapable service

Use of the machine with defective safety equipment

Non-observance of the service manual in regard to transport, stocking, setup, installation and service of the machine

Unlicensed modifications at the machine

Incorrect or incomplete repairs

Destructive force effect at the machine in cause of foreign objects or external use of force

Use of non-original spare parts
normal wear parts.

We cannot accept subsequent claims from damage or destruction of work pieces worked on in the machine, because we have no knowledge or control over the operating conditions at your site. This is valid in a general manner also for requirements from damage to articles, buildings and persons as well as the environment.

We do not warrant that the function of the machine will meet the customer's requirements or that the operation of the machine will to this regard be error free.

In no event will we be liable to the customer for any incidental, consequential, or indirect damages of any kind, including loss of profit and prosecution for environmental pollution, even if we could have been aware of the possibility of such damages.

All information was arranged with great care. We reserve ourselves however mistake and technical changes without previous announcement.

Running the machine in corroding, humid, dusty, extremely hot or explosive atmosphere happens at the operator's own risk and responsibility.

We explicitly exclude any warranty for damages resulting from running the machine in in corroding, humid, dusty, extremely hot or explosive atmosphere.

Copyright

© 2022 Bungard Elektronik GmbH & Co. KG